



## ENTRY DOOR AND SIDELITE HOMEOWNER MAINTENANCE AND CARE INSTRUCTIONS

### **Paint Finish: Water Reducible Enamel**

1. Should dust or other loose particles accumulate on the door, remove with a soft brush, soft cotton or flannel cloth.
2. Should the door develop residues such as body oils, cooking vapors, soils or other contaminations, simply wash off with a mild soap and warm water mixture.
3. To prevent scratching keep the weather-strip free of dirt and grit. Wash with a mild soap and warm water mixture.
4. Should the finish become scratched or chipped, use the professionally matched touch up paint furnished.

### **Stain Finish: Artist Oil and Clear Coat Polyurethane**

1. The clear coat polyurethane finish on the woodgrain stainable steel and woodgrain fiberglass finishes should be cleaned the same as the painted finish.
2. If you should want to freshen the clear coat surface of the finish after a period of time, we recommend a clear non-yellowing acrylic lacquer or other similar type of coating (Krylon or Sherwin Williams brand). Always test the new coating in a small area before refinishing the entire door.

**Do not use:** (a) cloths made of a coarse fabric; (b) harsh or abrasive chemical cleaners; (c) scotch or masking tape. Use of these materials may cause damage to the paint or stain finish.

### **Hardware and Hardware Accessories Finishes**

Schlage ULTIMA™ Anti-Tarnish Finishes and Hardware Accessory Finishes: In most cases, water and a soft cloth should clean the lock. If required, use a mild household soap. In severe climates a residue may appear which can easily be removed with standard glass cleaner or chrome polish and a soft cloth.

### **Hinge Adjustment (Steel Entry Doors Only)**

Weather and/or normal settling of your home may cause your door to come out of adjustment. With Paragon's patented adjustable hinge system, readjustment is a simple process. If your door does not have proper margin at top or does not fit flush with the frame, adjust as follows: Open door and loosen screws holding hinges to door, shift door up or down and twist in or out as necessary. Then retighten screws.

### **Tempered Safety Glass**

1. Clean with mild soap and water.
2. Do not use harsh detergents or solvents.
3. Cloth should be free of grit to prevent scratching.